




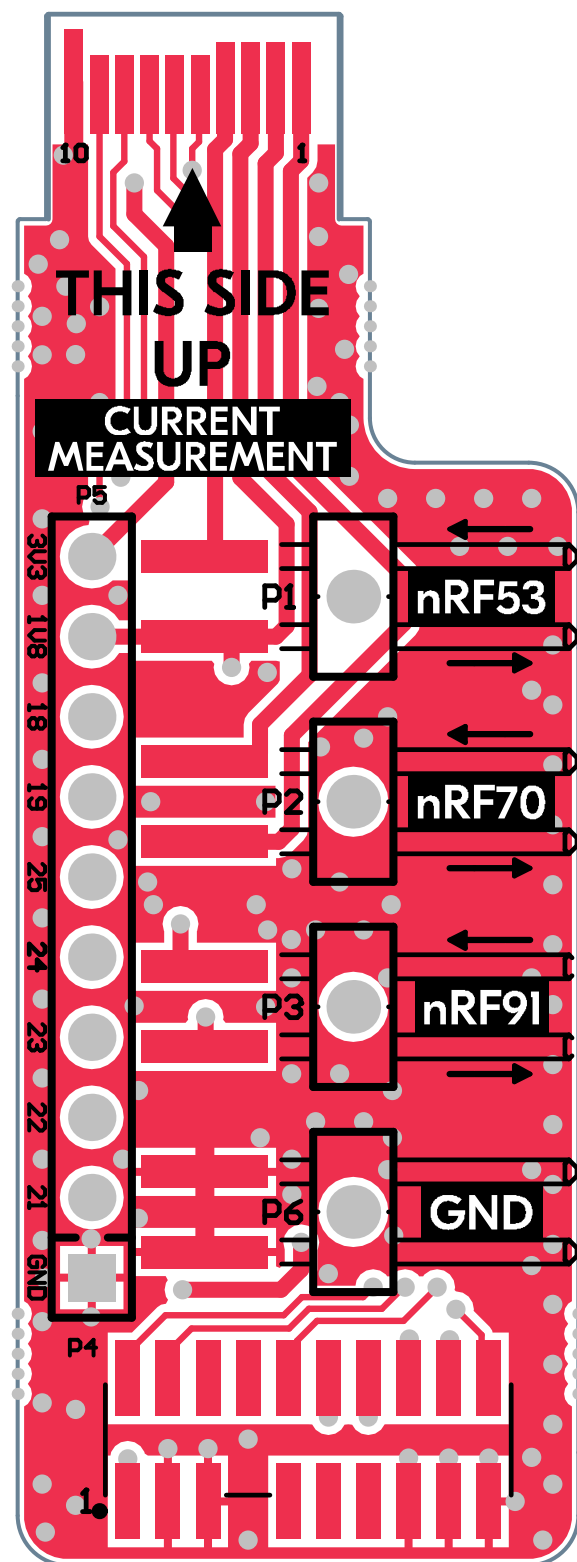



Nordic Semiconductor ASA

Thingy:91 X Current Measurement and Debug Board

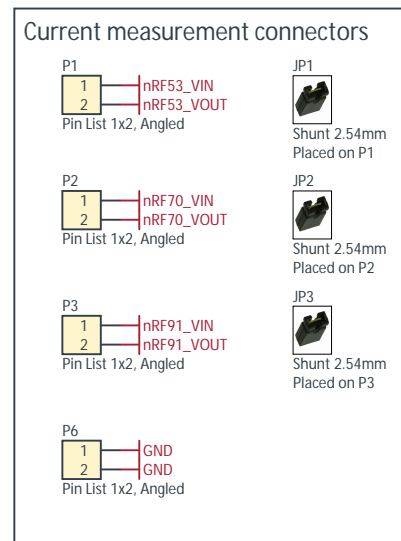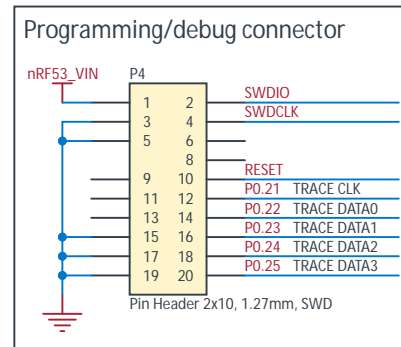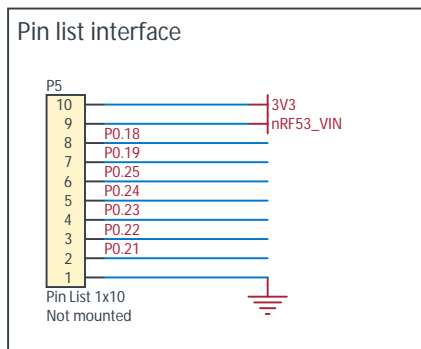

Title Thingy:91 X Current Measurement and Debug Board			
Size A4	PCB Assembly Number PCA64165	Revision 1.1.0	
Date: 2024.08.21		Sheet 1 of 1	
File: pca64165.SchDoc		Drawn By: MASI	
Classification: PUBLIC			

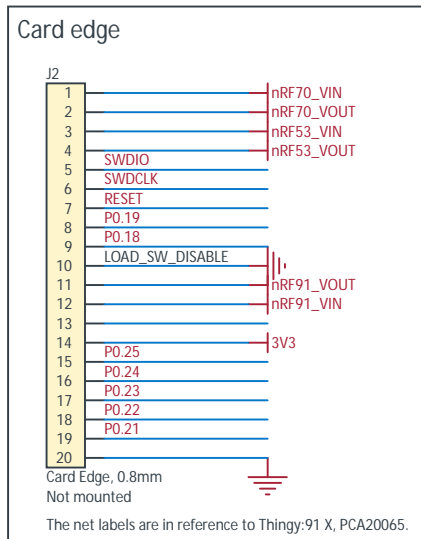

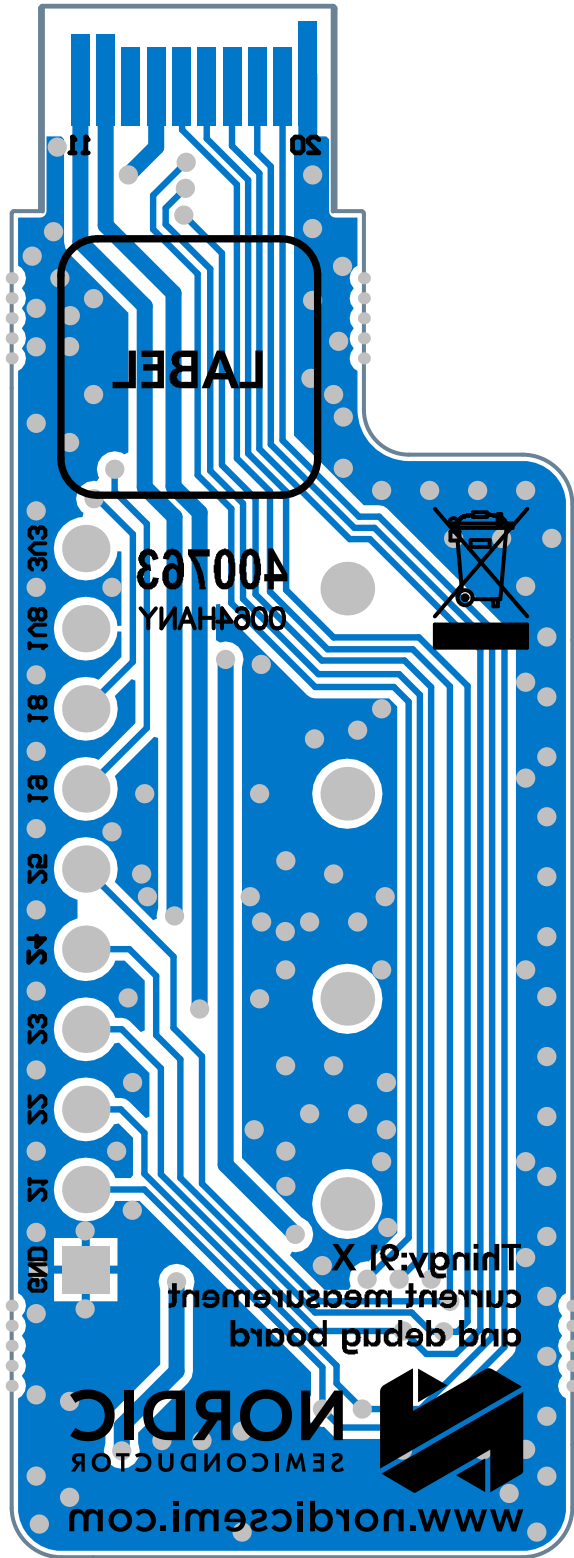


LABEL


400763
YUAHN 800



and debug board
current measurement
Thingy: 01 X

www.nordicsemi.com
SEMICONDUCTOR
NORDIC

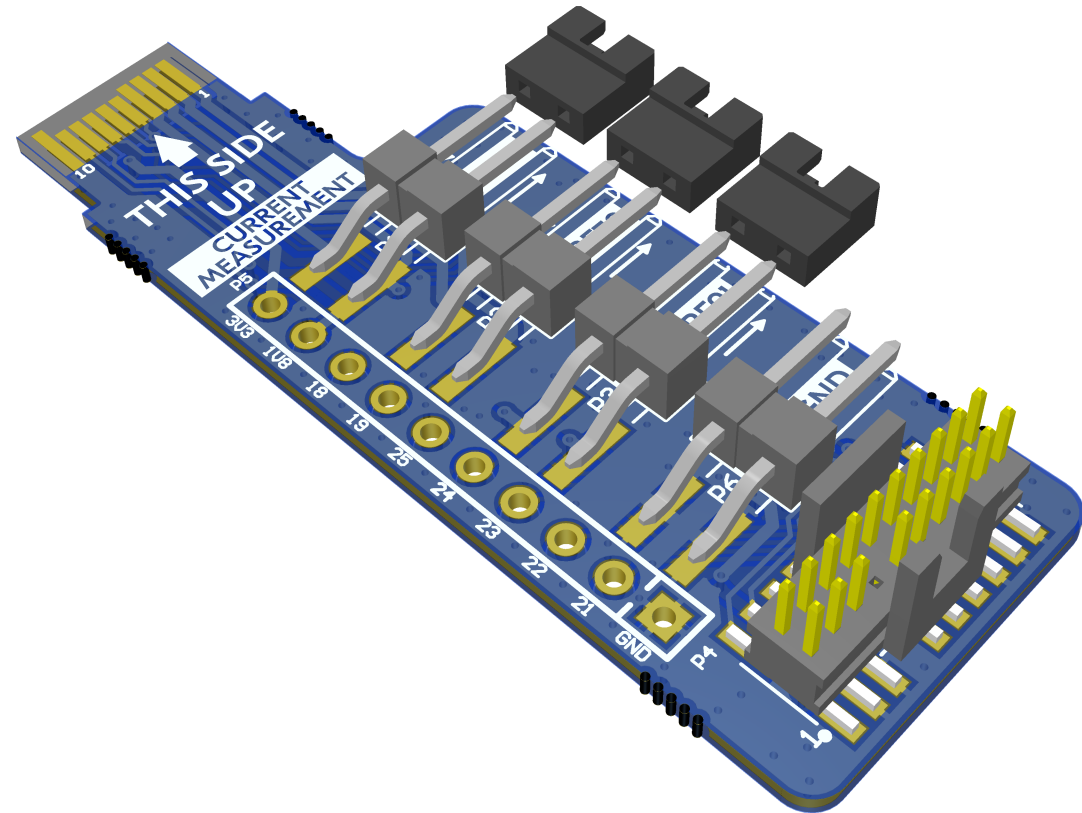

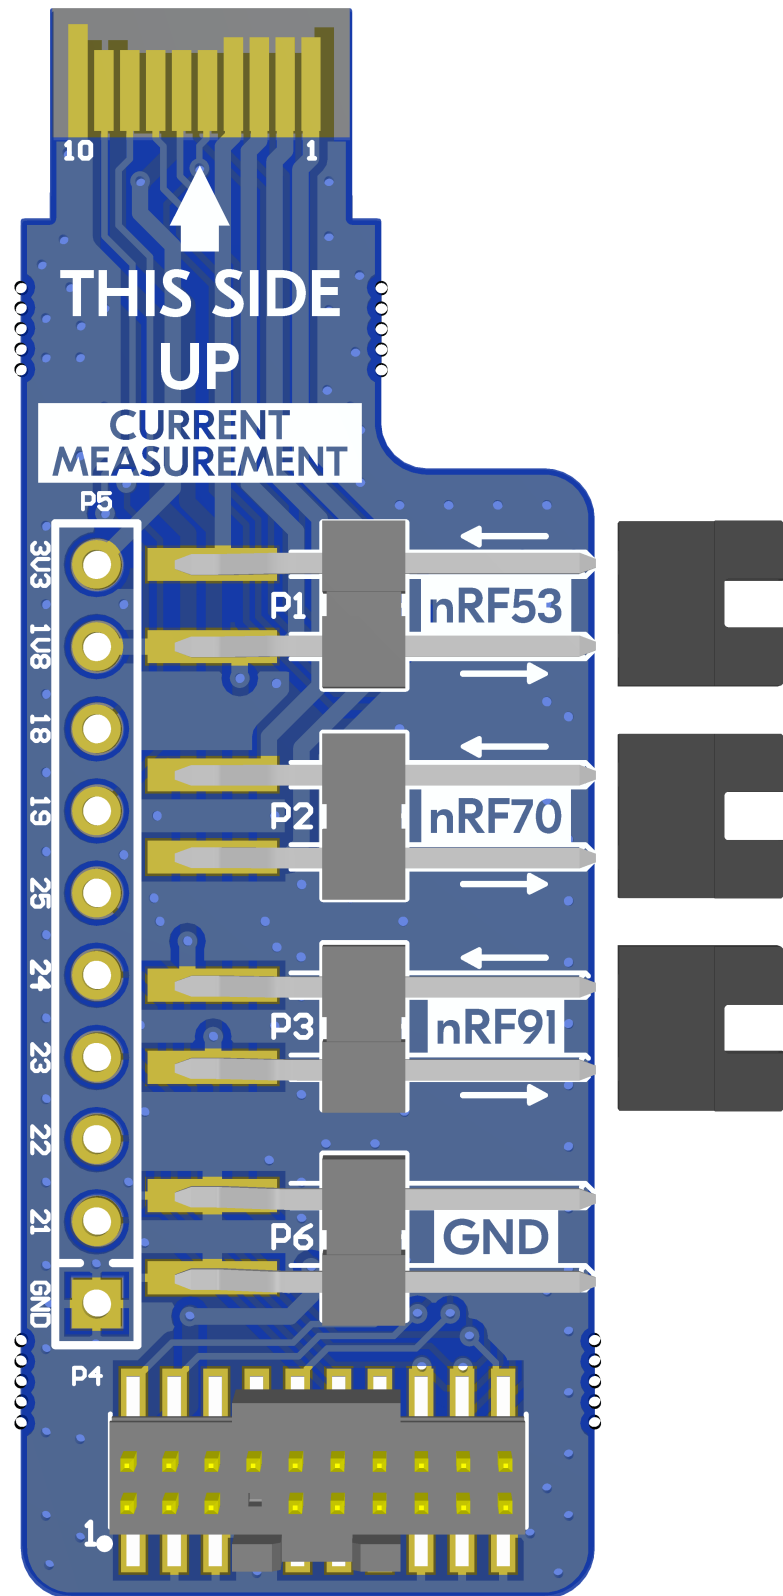



20 11

LABEL



400763
0064HANY

3U3

1U8

18

19

25

24

23

22

21

GND

Thingy:91 X
current measurement
and debug board



NORDIC
SEMICONDUCTOR

www.nordicsemi.com